

evolution  fires®

SPECTRUM SERIES

Fuelbed Light
Replacement

MANUAL DOWNLOAD




How to Replace the Fuel Bed Light

Step 1 - Remove the glass screen

IMPORTANT: UNPLUG THE FIRE FROM THE POWER SOURCE BEFORE STARTING THESE STEPS

Remove glass - Remove the screws circled in red so the glass can be removed. The screws will be needed to reinstall the glass.

Attention: After removing the screws, hold the glass firmly to prevent it from tipping forward.

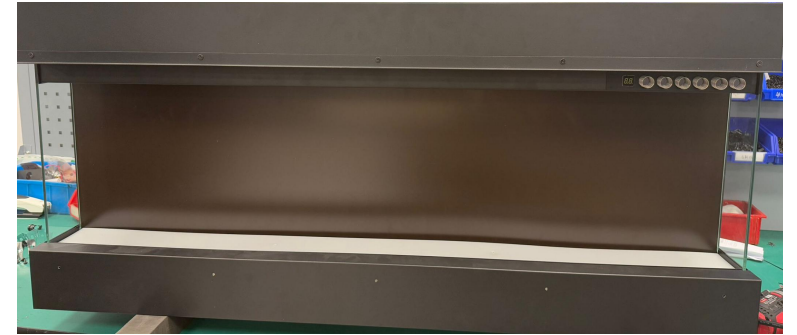

How to Remove the Plastic Tray

Step 2 - Remove the plastic tray

Remove the two screws circled in red to release the plastic tray.

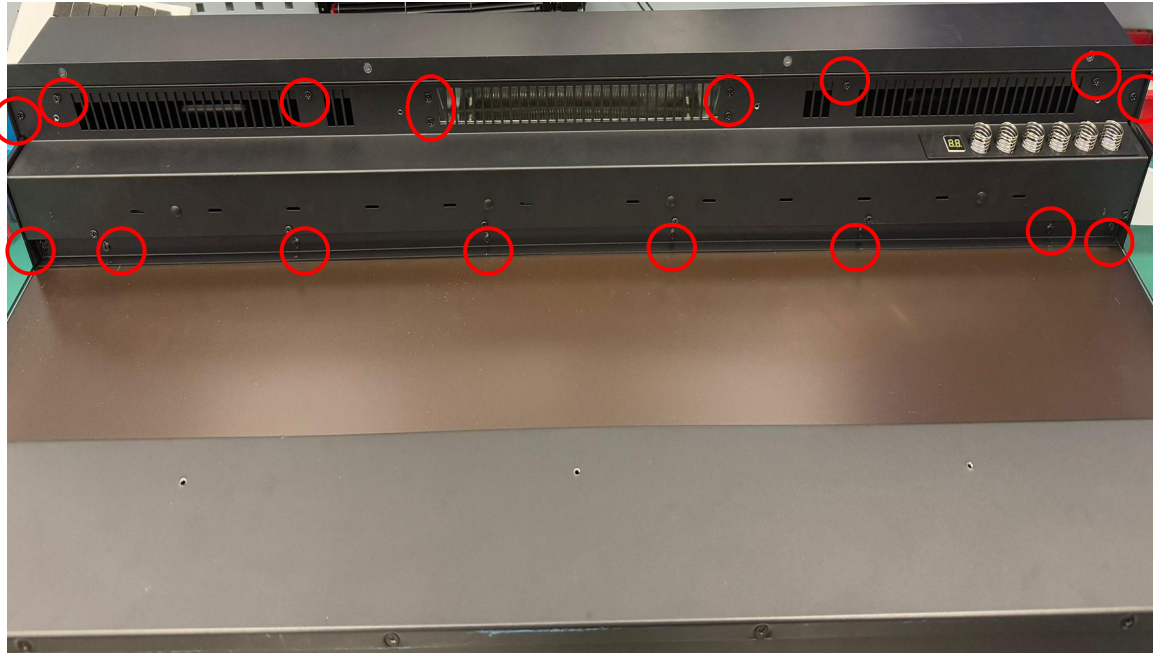


Photo after removing the plastic try.

How to Remove the Air Outlet Panel

Step 3-1

1. Remove the screws circled in red so the air outlet panel can be loosened.



The air outlet panel.

Step 3-2

2. Disconnect the connecting wires circled in red, and then remove the air outlet panel.

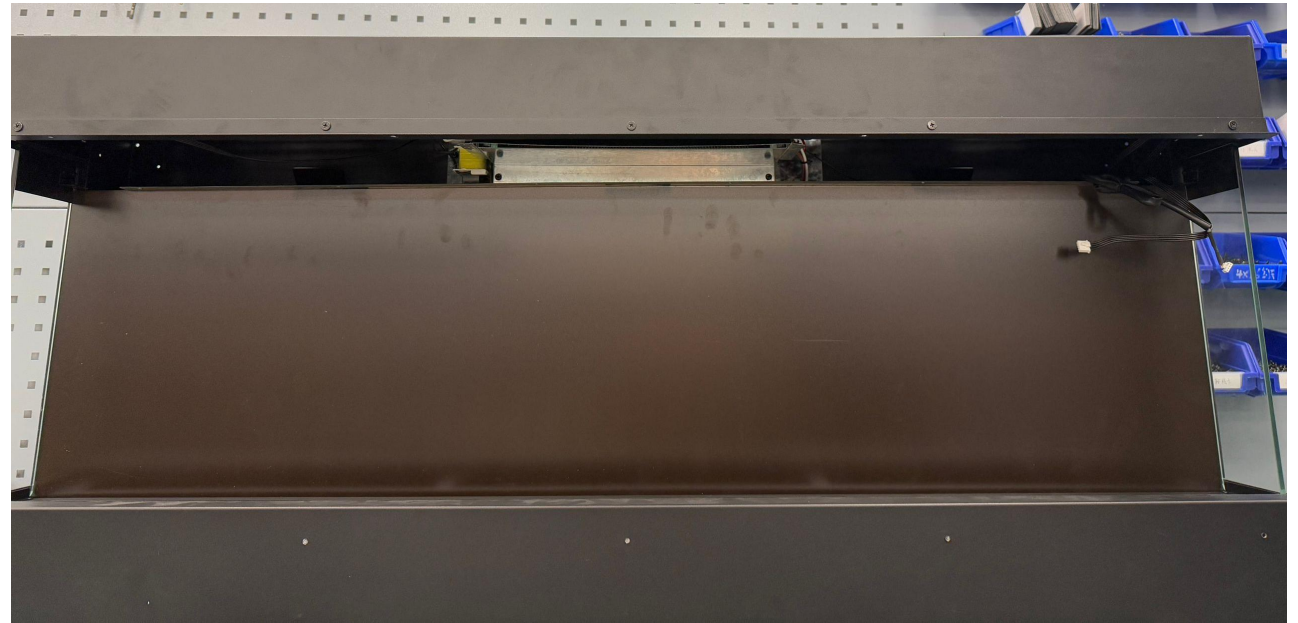


Photo after removal of the air outlet panel.



How to Remove the Side Glass

Step 4

Gently remove the left and right glass with your hands by pushing the top of each piece inward.



Remove the right glass

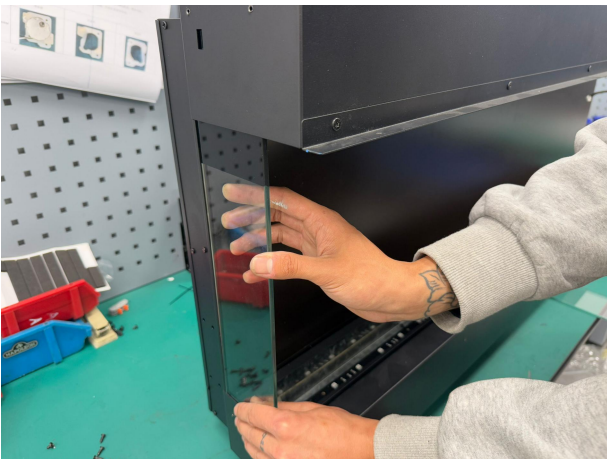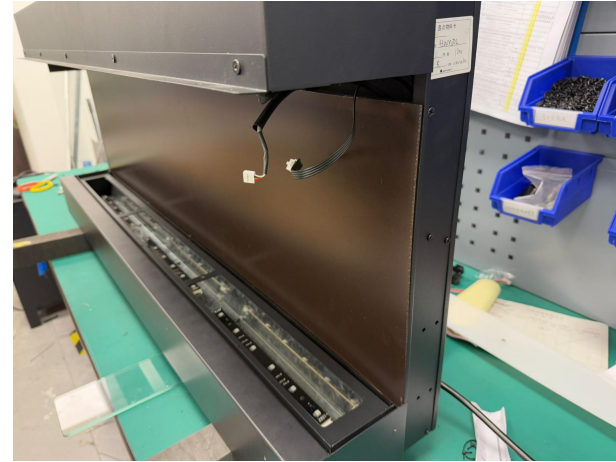

Remove the left glass



How to Remove the Back Plastic Screen

Step 5

After taking out the left and right glass, pull out the plastic screen by hand.




Photo after removal of the plastic screen.

How to change the fuel bed light

step 8



fuel bed light location

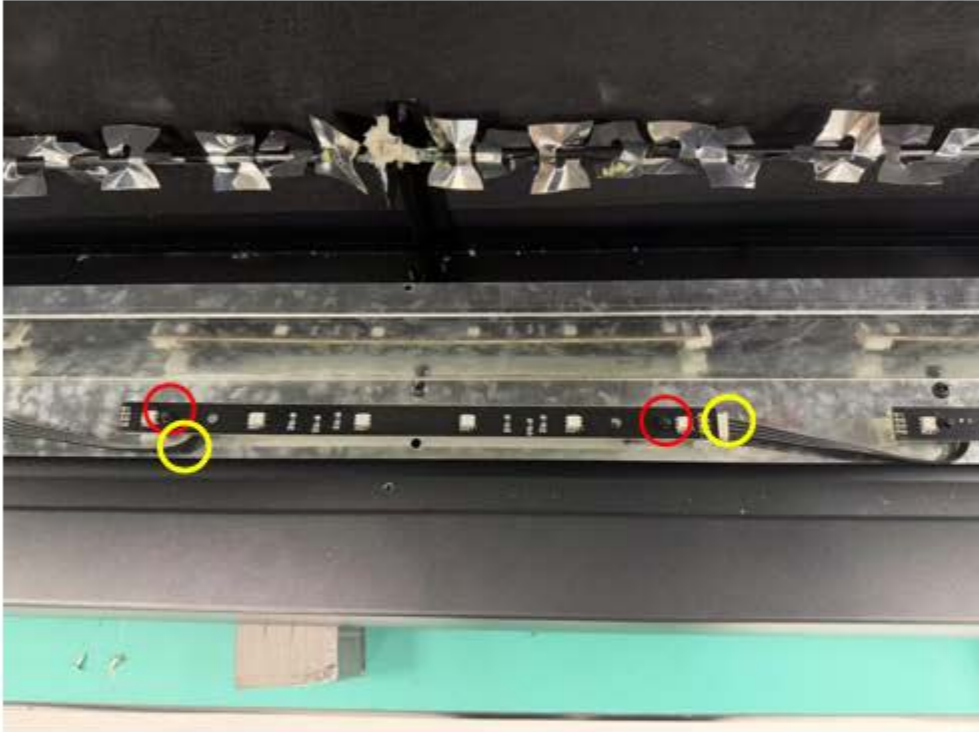

Attention: The connection method of the light bar is based on one in and two out

Use a tool to loosen the single headed airplane buckles with red circles on both sides of the fixed fuel bed light strip, and then unplug the connecting wire of the yellow circle to remove the fuel bed light strip.