

evolution  fires®

**SPECTRUM SERIES**

Touch Panel  
Replacement

MANUAL DOWNLOAD



# How to Replace the Touch Panel

## Step 1 - Remove the glass screen

**IMPORTANT: UNPLUG THE FIRE FROM THE POWER SOURCE BEFORE STARTING THESE STEPS**

Remove glass - Remove the screws circled in red so the glass can be removed. The screws will be needed to reinstall the glass.

Attention: After removing the screws, hold the glass firmly to prevent it from tipping forward.



# How to Remove the Plastic Tray

## Step 2 - Remove the plastic tray

Remove the two screws circled in red to release the plastic tray.

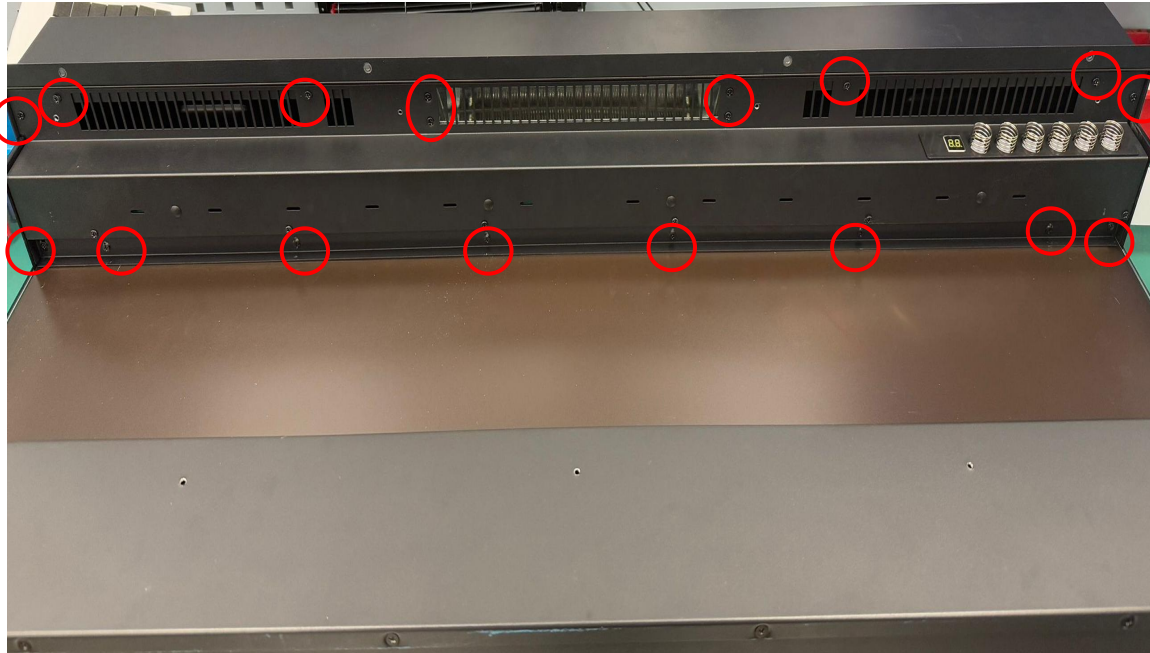


Photo after removing the plastic try.

# How to Remove the Air Outlet Panel

## Step 3

1. Remove the screws circled in red so the air outlet panel can be loosened.



The air outlet panel.

# How to Remove the Touch Panel

## Step 4

The touch panel is located on the air outlet panel component



Touch  
Panel  
Location



Use a Phillips screwdriver to press down the red circle buckle (the button board buckle is axisymmetric, and all four buckles need to be pressed down) to remove the touch panel.